 
 




**GROOMING KIT  
FOR PRECISE STYLING  
AND FINISHING**

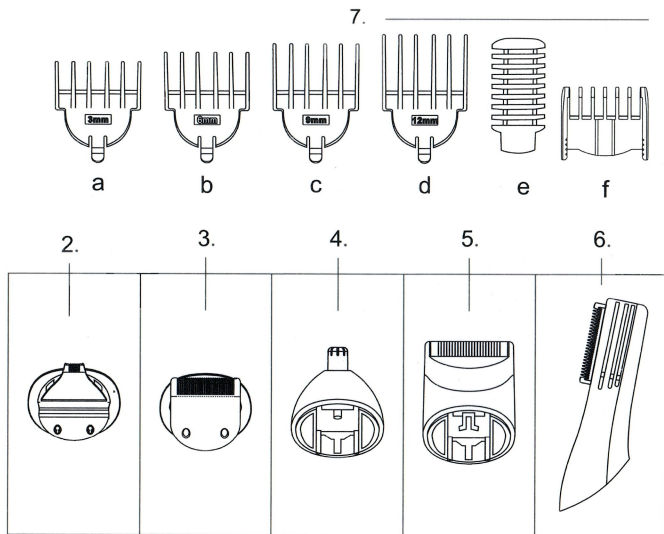

**LK-860**

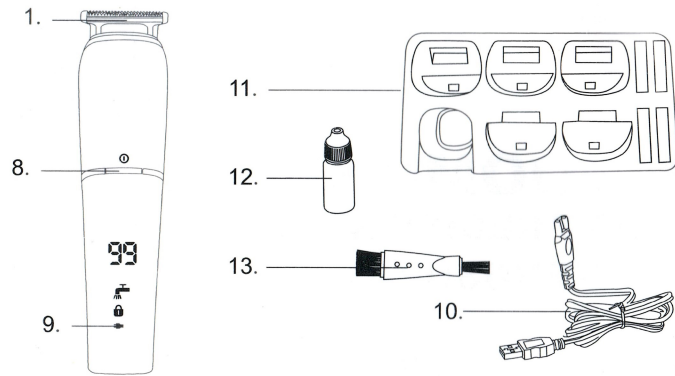

## ENGLISH

 
 
 
 
 
 
 
 
 
 
 
 
Our products are designed to meet the highest standard of quality, functionality and design. We hope you enjoy using your new appliance. Please read the instructions for use carefully and keep in a safe place for future reference.

 
 
### ⚠ CAUTION

- ⚡ Use this appliance only for its intended use as described in this manual.
- ⚡ Do not use this product if it is not working correctly, if it has been dropped or damaged, or dropped into water.

### 👁 DESCRIPTION

- 1. Full size trimmer
- 2. Design trimmer
- 3. Precision trimmer
- 4. Nose trimmer
- 5. Micro shaver
- 6. Body trimmer
- 7. 5 Guide combs
  - a-d. For full size trimmer and precision trimmer
  - e. For body trimmer
  - f. For precision trimmer
- 8. On/Off Switch
- 9. Charging indicator light
- 10. USB charging cable
- 11. Stand base
- 12. Lubricating oil
- 13. Cleaning brush

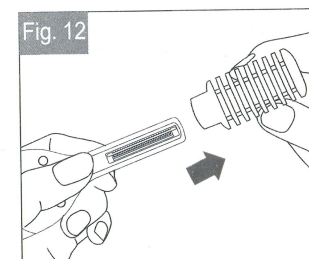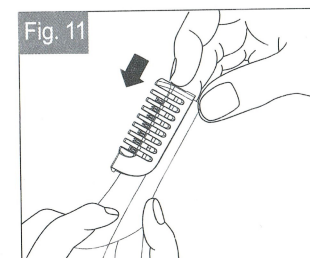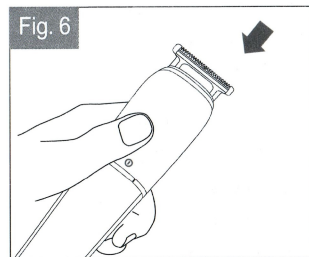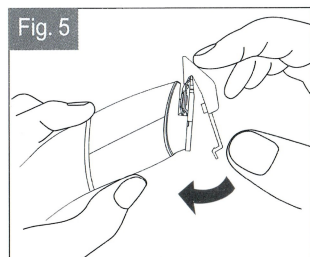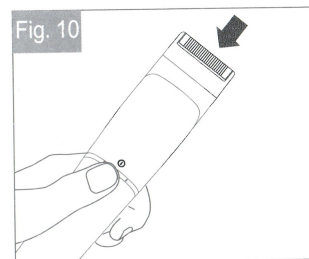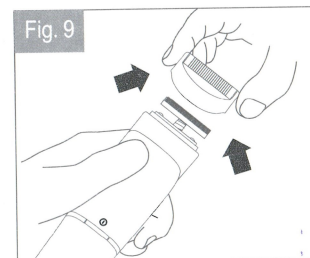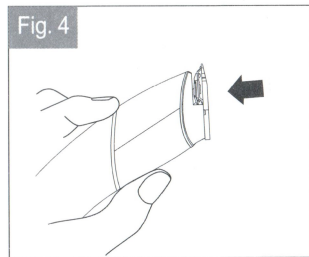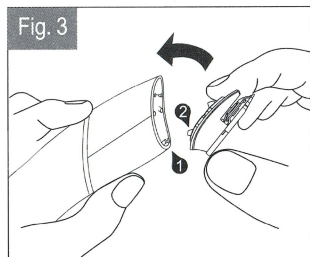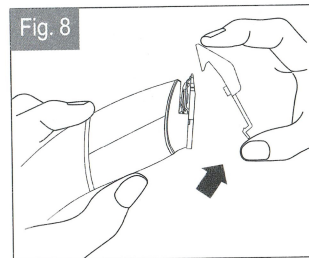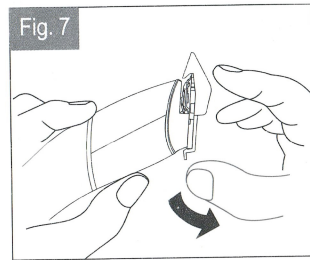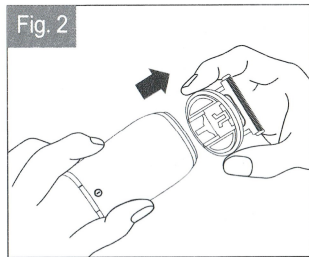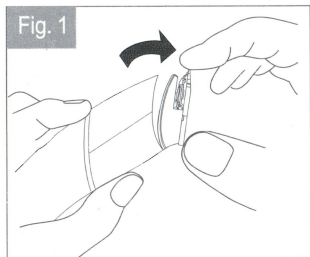

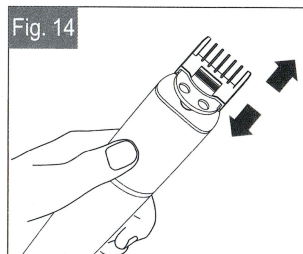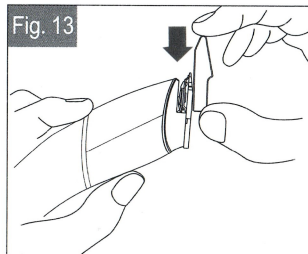

## GETTING STARTED

### ■ CHARGING YOUR PERSONAL GROOMER

Before using your personal groomer for the first time, charge for 8 hours.

- ▶ Ensure the product is switched off.
- ▶ Connect the charging adaptor to the product and then to the mains. The charging indicator will light up.
- ▶ Your personal groomer cannot be overcharged. However, if the product is not going to be used for an extended period time(2-3months),unplug it from the mains and store. Fully recharge your personal groomer when you would like to use it again.
- ▶ To preserve the life of your batteries ,let them run out every six months then encharge for 14-16 hours .

## HOW TO MATCH THE APPLIANCE

### ■ WAYS OF MATCHING APPLIANCE

- ▶ When changing the parts ,first use the finger put the part in the right position, put the heads parts directing to the body align with the lock and press the parts. (Fig. 3-4)
- ▶ Remove out the heads parts as picture. (Fig 1-2)
- ▶ Match the positioning comb from front to back balancely till lock with heads parts. (Fig.5-6)
- ▶ There are four positioning combs with four levels as below.

### ■ WAYS OF MATCHING POSITIONING COMB

No.	Level	Length(mm)
1	1	3
2	2	6
3	3	9
4	4	12

- ▶ Remove out the positioning combs from back to front as picture. (Fig.7-8)
- ▶ Press the two sides of the micro shaver attachment and remove out from the body. (Fig.9)
- ▶ Press the two sides of the micro shaver attachment and insert to the body. (Fig.10)

### ■ WAYS OF MATCHING PRECISION TRIMMER COMB

No.	Level	Length(mm)
1	1	2
2	2	3.5
3	3	5
4	4	6

 
 
- ▶ Match the precision trimmer positioning comb from up to down balancely till lock with heads parts(Fig. 13)
- ▶ Choose different 4 levels positions for precision trimmer positioning comb from up and down.(Fig.14)

- ▶ Put the body trimmer positioning comb with 3 levels attachment balancely, then by sliding downwards, as pic shows. (Fig. 11)
- ▶ Remove out of the body trimmer positioning comb upwards , as the pic shows. (Fig. 12)

No.	Level	Length (mm)
1	1	2.8
2	2	5.8
3	3	9.8







■ WAYS OF CLEANING THE APPLIANCE






- ▶ When cleaning the appliance, just separate the appliance, as the pic shows. Then use the cleaning brush, clear the dust by cleaning the inside parts. (Fig. 15-16)
- ▶ This product can be body wash

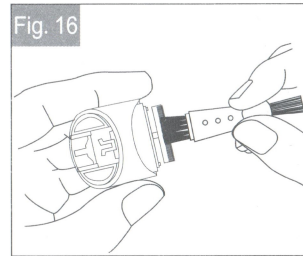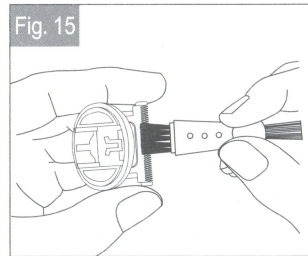

■ WAYS OF CLEANING THE APPLIANCE

           - ▶ The charging on the adaptor indicates that the appliance is charging. (Fig. 17)
- ▶ Insert the appliance plug directly into the body. (Fig. 18)

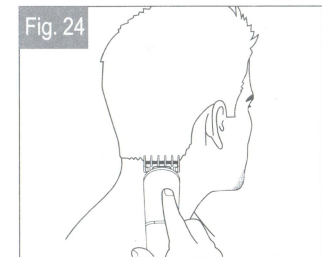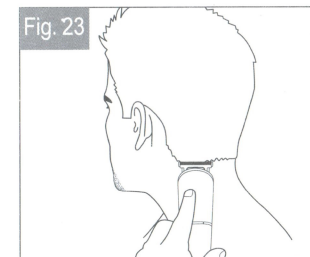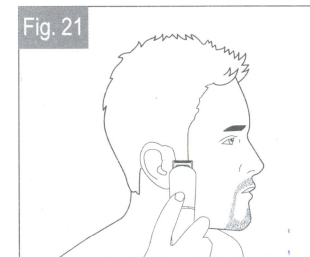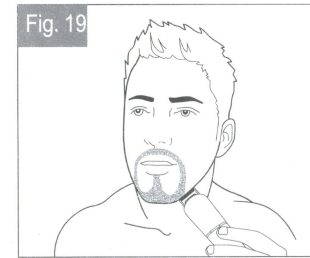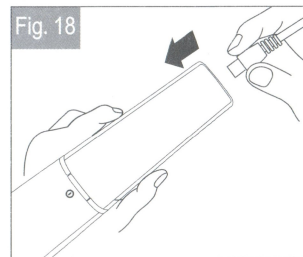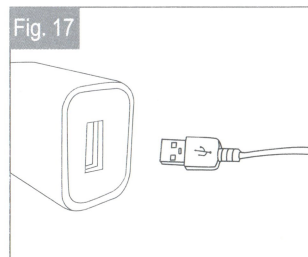

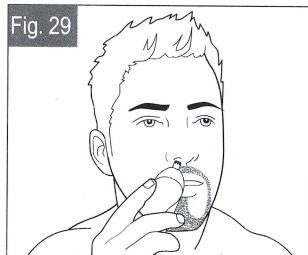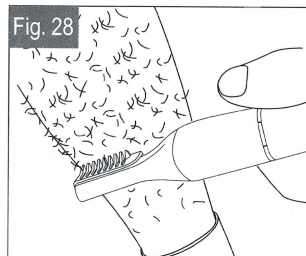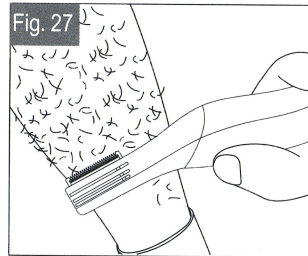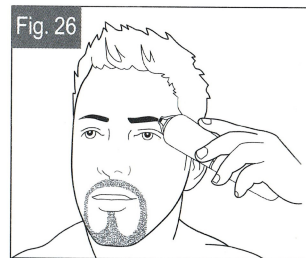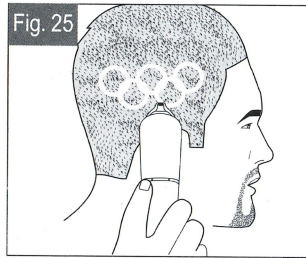

## HOW TO USE

- TO THIN AND TAPER THE BEARD/MOUSTACHE (Fig.23-24)
    - ▶ Attach a guide comb to full size trimmer. If you are trimmer for the first time start with the maximum trimming length setting.
    - ▶ Turn the unit on.
    - ▶ Place the flat top of the trimmer comb against the skin.
    - ▶ Slowly slide the personal groomer through the hair. Repeat from different directions as necessary.
    - ▶ If hair builds up in the trimmer comb during the trimming process, switch the unit off, pull off the comb and brush/rinse off.
  - TO DEFINE THE BEARD/MOUSTACHE LINE (Fig. 19-20)
    - ▶ Hold the personal groomer with precision Trimmer Blade facing you.
    - ▶ Start with edge of beard/moustache line and gently lower the trimmer blade onto your skin. Use motions towards edge of beard/moustache line to trim to desired locations in facial area and away from beard in neck area
  - TRIMMING EDGE OF SIDEBURNS (Fig.21-22)
    - ▶ Hold the personal groomer with precision Trimmer Blade facing you.
    - ▶ Start with edge of sideburn, and with the trimmer blades resting lightly against your skin, use motions towards edge of sideburn line to trim to desired locations in facial area.
  - USING THE MICRO SHAVER TRIMMER (Fig.30)
    - ▶ Attach the micro shaver trimmer
    - ▶ Hold the groomer so the micro shaver gently touches your face in a 45 degree angle.
    - ▶ Use short, well-controlled movements to shave around your Beard/Moustache. Use your free hand to stretch your skin. This encourages the hair to stand upright, making it easier to shave.
- NOTE: The micro shaver was designed to shave the detail areas around your beard/moustache/sideburns. It was not designed to shave your entire face. For a close comfortable shave, guaranteed, use one of ante electric shavers.
- TO REMOVE HAIR FROM NOSE AND EAR (Fig. 29)
    - ▶ Attach nose trimmer attachment.
    - ▶ Insert the personal groomer gently into nostril or ear.
    - ▶ Gently move the groomer in and out of the nostril or ear and at the same time rotate.
    - ▶ Avoid inserting the cutting unit more than 6mm into your nostril or ear.
  - TO REMOVE HAIR FROM EYEBROWS (Fig.26)
    - ▶ Attach design trimmer attachment.

- ▶ Gently guide cutting unit to stray, unwanted hairs along the eyebrow line or protruding from the eyebrow itself.

#### ■ USING THE DESIGN TRIMMER (Fig.25)

- ▶ Attach design trimmer attachment.
- ▶ To trim the hair in the efficient way, remove what shape you want.

#### ■ BODY TRIMMER(Fig.27)

- ▶ Attach body trimmer attachment.
- ▶ To trim the body hair in the efficient way, remove what you want and where you like, as the pic shows.
- ▶ It will like this with body hair trimmer positioning comb after you finish removing the armpit hair. (Fig.28)

#### ■ ATTACHING AND REMOVING THE TRIMMER COMB ATTACHMENT

NOTE: Always ensure the personal groomer is switched off before changing any attachments.

#### ■ TIPS FOR BEST RESULTS

- ▶ Beard, moustache and sideburn hairs should be dry.
- ▶ Avoid using lotions before using your personal groomer. Comb your hair in the direction that it grows.
- ▶ Remove trimmer comb attachment if you are: defining hairline edges such as sideburns, trimming the nape of your neck, trimming your beard line on front of neck.

## ∞ CARE FOR YOUR PERSONAL GROOMER

### CLEANING AND MAINTAINING YOUR PERSONAL GROOMER

#### ■ AFTER EACH USE

1. Turn the personal groomer off.
2. Gently brush the remaining hairs away/rinse under warm water from the guide comb and trimmer blade.

#### ■ CLEANNG CAUTIONS

- ▶ Only the guide comb attachment and trimmer blade may be removed from the product for cleaning.
- ▶ Cleaning should only be done with a soft brush, such as the brush supplied with the product.
- ▶ Only use the light-grade oil supplied or sewing machine oil on the blades.
- ▶ Do not use harsh or corrosive cleaners on the units or their blades.
- ▶ Do not submerge in water as damage will occur.

#### ■ STORAGE

- ▶ Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140 F (60°C).
- ▶ Do not wrap the cord of the charging adaptor around the appliance.



## IMPORTANT SAFETY INSTRUCTIONS

WARNING-TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE, OR INJURY TO PERSONS:

- ▶ An appliance never be left unattended when plugged into a power outlet.
- ▶ Keep the power plug and cord away from heated surfaces.
- ▶ Make sure the power plug and cord do not get wet.
- ▶ Do not plug or unplug the product with wet hands.
- ▶ Do not use the product with a damaged cord. A replacement can be obtained via our International Service Centres.
- ▶ Charge, use and store the product at a temperature between 15°C and 35°C.
- ▶ Always unplug from the mains when cleaning.
- ▶ Only use the parts supplied with the appliance.
- ▶ Keep this product out of reach of children. The use of this appliance by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can give cause to hazards. Persons responsible for their safety should give explicit instructions or supervise the use of the appliance.



## PROTECT THE ENVIRONMENT

DO NOT DISPOSE THE TRIMMER IN HOUSEHOLD WASTE AT THE END OF ITS USEFUL LIFE.

DISPOSAL CAN TAKE PLACE AT OUR SERVICE CENTRES OR APPROPRIATE COLLECTION SITES.

- ⚠ CAUTION: Do not put in fire or mutilate your battery packs they may burst or release toxic materials.



- Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment (Fig.31).