

# 11 in 1 SUPER GROOMING KIT

PROFESSIONAL BLADE  
LI-ION BATTERY  
FAST CHARGE: 2 HOURS  
WORK TIME: 90 MINUTES  
FK-8588T

 
 
 


MULTI GROOMING KIT HAIR TRIMMER



-   
2h & 90 min
-   
Usb charging
-   
One touch on/off
-   
Washable bit tool
-   
Sharp blade
-   
Guarante

## INSTRUCTION MANUAL

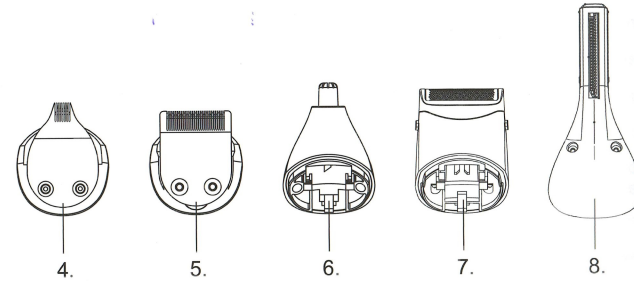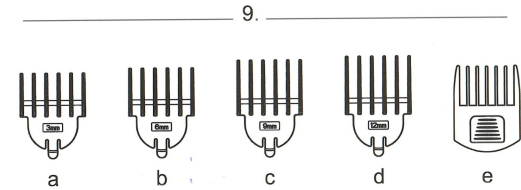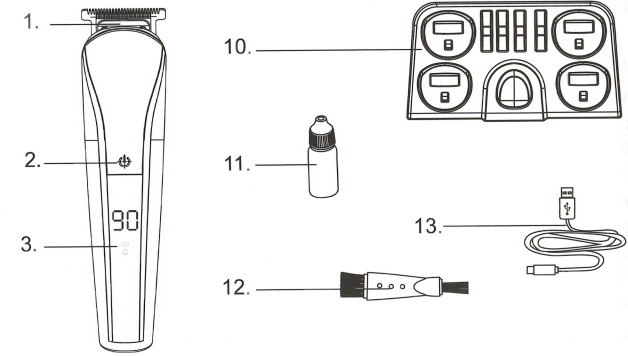

Our products are designed to meet the highest standard of quality, functionality and design. We hope you enjoy using your new appliance. Please read the instructions for use carefully and keep in a safe place for future reference.

### ⚠ CAUTION

- ◆ Use this appliance only for its intended use as described in this manual.
- ◆ Don't use this product if it isn't working correctly, if it has been dropped or damaged, or dropped into water.

 
 
 
 
 
 
### 👁 DESCRIPTION

 
 
 
 
 
 
 
 
- |                                      |   |
|--------------------------------------|---|
| 1. full size trimmer                 | 8. body trimmer                             |
| 2. ON/OFF switch                     | 9. 5 guide combs a-e. for full size trimmer |
| 3. Charge / working / status display | 10. stand base                              |
| 4. design trimmer                    | 11. lubricating oil                         |
| 5. precision trimmer                 | 12. cleaning brush                          |
| 6. Nose/ear trimmer                  | 13. USB cable(5A 1A charger applicable)     |
| 7. micro shaver                      |   |

### © specification

Products: intelligent body care kit  
Model: FK-8588T  
Battery type: li-ion battery  
Charging time: 2 hours  
Use time: 90 minutes  
Input: AC 110-240v ~ 50/60hz  
DC 5V 1A

Rated power: 3W  
Production date:  
please see the product body  
Standard: GB4706.1-2005  
GB4706.9-2008

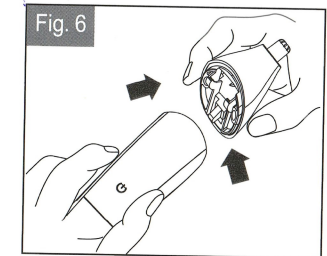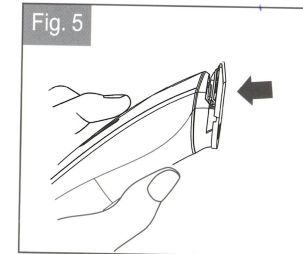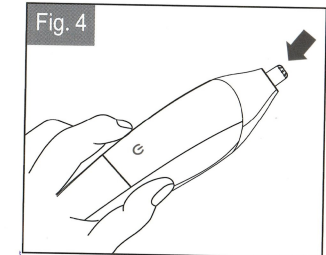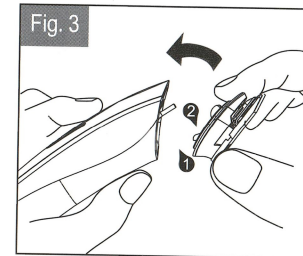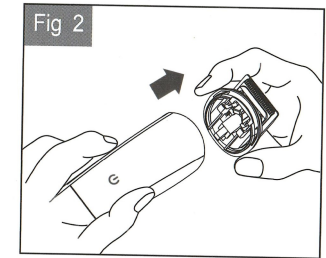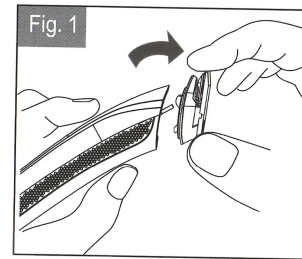

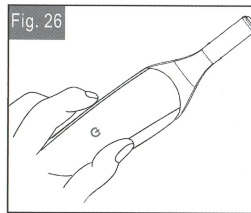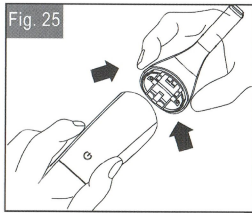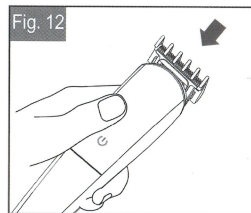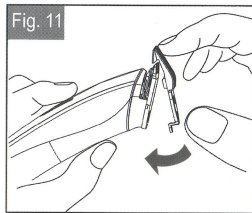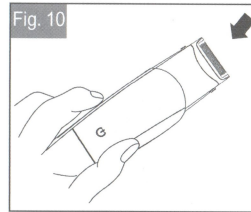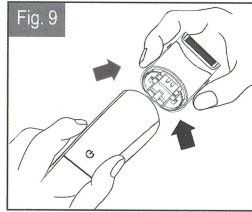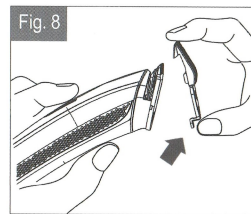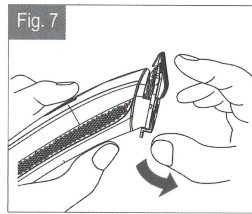

## GETTING STARTED

- Charging your personal groomer  
Before using your personal groomer for the first time, charge for 2 hours.
- ▶ Ensure the product is switched off.
- ▶ Connect the charging adaptor to the product and then to the usb port. The charging indicator will light up.
- ▶ Your personal groomer cannot be overcharged. However, if the product is not going to be used for an extended period time(2-3months), unplug it from the mains and store. Fully recharge your personal groomer when you would like to use it again.
- ▶ To preserve the life of your batteries, let them run out every 6 months then encharge for 14-16 hours.

## HOW TO MATCH THE APPLIANCE

- Ways of matching appliance
- ▶ When changing the parts, first use the finger put the apt in the right position, put the heads parts directing to the body align with the lock and press the parts. (fig. 3-4)
- ▶ Remove out the heads parts as picture. (fig.1-2)
- ▶ Match the full size trimmer positioning comb from front to back balancely till lock with heads parts.(fig.3,5)
- ▶ There are four positioning combs with four levels as below.

 
 
### ■ Ways of matching full size trimmer comb

No.	Level	Length(mm)
1	1	3
2	2	6
3	3	9
4	4	12









### ■ Ways of matching precision trimmer comb



No.	Level	Length(mm)
1	1	1
2	2	2
3	3	3
4	4	4

- ▶ Remove out the positioning combs from back to front as picture.(fig.7-8)
- ▶ Press the two sides of the micro shaver attachment and remove out from the body.(fig.9)
- ▶ Press the two sides of the micro shaver attachment and insert to the body.(fig.10)
- ▶ Match the precision trimmer positioning comb from up to down balancedly till lock with heads parts(fig.11)
- ▶ Choose different 4 levels positions for precision trimmer positioning comb from up and down.(fig.12)
- Ways of cleaning the appliance
  - ▶ When cleaning the appliance, just separate the appliance, as the pic shows. Then use the cleaning brush, clear the dust by cleaning the inside parts.(fig.13-14)

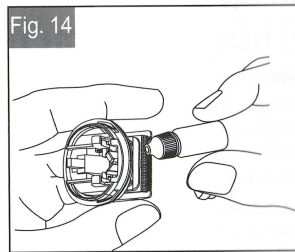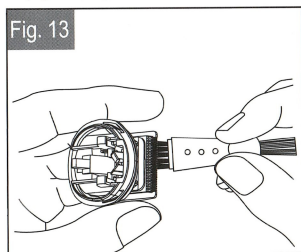

          - Ways of cleaning the appliance
  - ▶ Usb cable charge and very convenient.(fig.15)
  - ▶ Insert the appliance plug directly into the body.(fig.16)

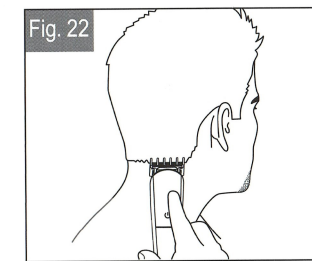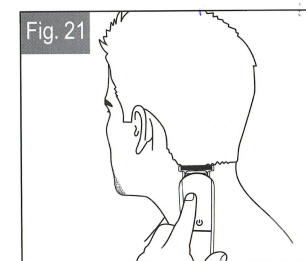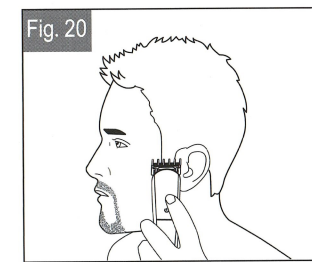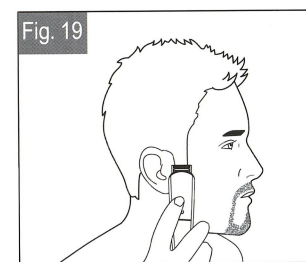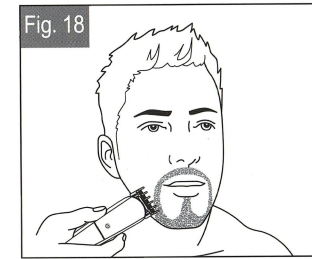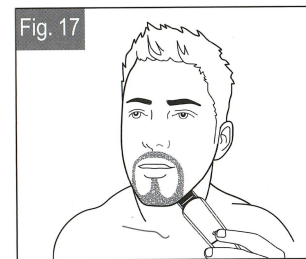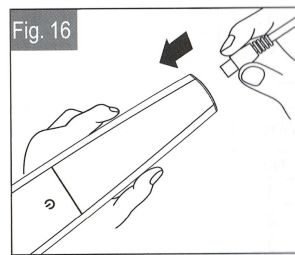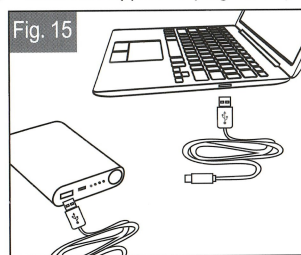

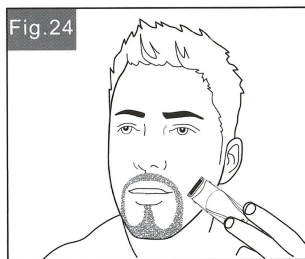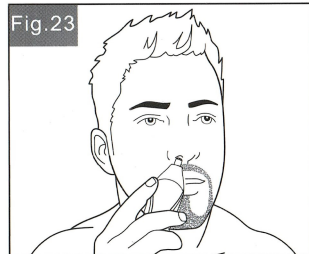

## HOW TO USE

- To thin and taper the beard/moustache(fig.21-22)
  - ▶ Attach a guide comb to full size trimmer. If you are trimmer for the first time start with the maximum trimming length setting.
  - ▶ Turn the unit on.
  - ▶ Place the flat top of the trimmer comb against the skin.
  - ▶ Slowly slide the personal groomer through the hair. Repeat from different directions as necessary.
  - ▶ If hair builds up in the trimmer comb during the trimming process, switch the unit off, pull off the comb and brush/rinse off.
- To define the beard/moustache line(fig.17-18)
  - ▶ Hold the personal groomer with precision trimmer blade facing you.

- ▶ Start with edge of beard/moustache line and gently lower the trimmer blade onto your skin. Use motions towards edge of beard/moustache line to trim to desired locations in facial area and away from beard in neck area
  - Trimming edge of sideburns(fig.19-20)
    - ▶ Hold the personal groomer with precision trimmer blade facing you.
    - ▶ Start with edge of sideburn, and with the trimmer blades resting lightly against your skin, use motions towards edge of sideburn line to trim to desired locations in facial area.
  - Using the micro shaver trimmer(fig.24)
    - ▶ Attach the micro shaver trimmer
    - ▶ Hold the groomer so the micro shaver gently touches your face in a 45 degree angle.
    - ▶ Use short, well-controlled movements to shave around your beard/moustache. Use your free hand to stretch your skin. This encourages the hair to stand upright, making it easier to shave.
- Note: the micro shaver was designed to shave the detail areas around your beard/moustache/sideburns. It was not designed to shave your entire face. For a close comfortable shave, guaranteed, use one of ante electric shaver.
- To remove hair from nose and ear(fig.23)
    - ▶ Attach nose trimmer attachment.
    - ▶ Insert the personal groomer gently into nostril or ear.
    - ▶ Gently move the groomer in and out of the nostril or ear and at the same time rotate.
    - ▶ Avoid inserting the cutting unit more than 6mm into your nostril or ear.
  - Attaching and removing the trimmer comb attachment
 

Note: always ensure the personal groomer is switched off before changing any attachments.
  - Tips for best results
    - ▶ Beard, moustache and sideburn hairs should be dry.
    - ▶ Avoid using lotions before using your personal groomer. Comb your hair in the direction that it grows.
    - ▶ Remove trimmer comb attachment if you are: defining hairline edges such as sideburns, trimming the nape of your neck, trimming your beard line on front of neck.

## **∞ CARE FOR YOUR PERSONAL GROOMER**

Cleaning and maintaining your personal groomer

### ■ After each use

1. Turn the personal groomer off.
2. Gently brush the remaining hairs away/rinse under warm water from the guide comb and trimmer blade.

### ■ Cleaning cautions

- ▶ Only the guide comb attachment and trimmer blade may be removed from the product for cleaning.
- ▶ Cleaning should only be done with a soft brush, such as the brush supplied with the product.
- ▶ Only use the light-grade oil supplied or sewing machine oil on the blades.
- ▶ Do not use harsh or corrosive cleaners on the units or their blades.
- ▶ Do not submerge in water as damage will occur.

### ■ Storage

- ▶ Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140 f (60°C).
- ▶ Do not wrap the cord of the charging adaptor around the appliance.

## **STOP IMPORTANT SAFETY INSTRUCTIONS**

Warning-to reduce the risk of burns, electrocution, fire, or injury to persons:

- ▶ An appliance never be left unattended when plugged into a power outlet.
- ▶ Keep the power plug and cord away from heated surfaces.
- ▶ Make sure the power plug and cord do not get wet.
- ▶ Do not plug or unplug the product with wet hands.
- ▶ Do not use the product with a damaged cord. a replacement can be obtained via our international service centres.
- ▶ Charge, use and store the product at a temperature between 15°C and 35°C.
- ▶ Always unplug from the mains when cleaning.
- ▶ Only use the parts supplied with the appliance.

- ▶ Keep this product out of reach of children. The use of this appliance by persons With reduced physical, sensory or mental capabilities or lack of experience and Knowledge can give cause to hazards. Persons responsible for their safety Should give explicit instructions or supervise the use of the appliance.

## **♻️ PROTECT THE ENVIRONMENT**

Do not dispose the trimmer in household waste at The end of it's useful life.

Disposal can take place at our service centers or appropriate collection sites.

- ⚠️ Caution: do not put in fire or mutilate your battery packs they may burst or release toxic material.
- ♻️ Do not throw away the appliance with the normal household waste at the end Of it's life, but hand it in at an official collection point for recycling. By doing This, you help to preserve the environment(fig.25)

## **🔪 BATTERY REMOVAL**

Lift the battery out of the housing by using a scissor cut down the connection between the body and the power line. Twist the connecting wires until they break(fig.26)

The battery must be removed from the appliance before it is scrapped. The battery is to be disposed of safely.

1. Unplug groomer from outlet to avoid risk of electrical shock.
3. With wire cutters, clip the wires leading to the batteries.
2. Remove rear groomer cover by first prying the rebber panel from the product with a flat head screwdriver. Pry the on/off switch from the product by head screwdriver. Unscrew the upper housing by head screwdriver and pry the upper housing from the product with a flat head screwdriver. This will expose the batteries.
4. Remove the batteries from the product. Contact your local authorities for proper disposal.

